


HP-380

Technical Manual

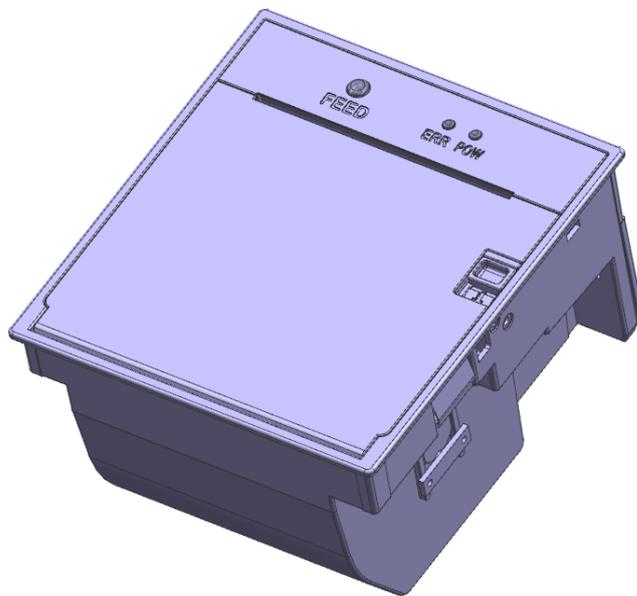

● PRODUCT MANUAL

This manual provides basic information and instructions for using HP-380 series.

Follow the manual to install and use the printer device. Failure to do so may result in a problem with the device.

The user is responsible for the loss caused by improper handling and operation.

This document is subject to change without prior notice. If you do not find any suspicious information, or have any questions about this manual, please contact the place where you purchased the product.

● Warning and Caution for Safety

In order to use the product properly and prevent safety accidents, please keep the following information.



Please follow the direction in using the product as it may become the reason of malfunction, serious injury, or even death..

Warning

- Do not disassemble or modify the product.
- Do not remove jammed paper while power is turned on.
- Do not go over the specified voltage.
- Do not wash the product.
- Do not hit or cause an impact to the product.
- Do not store the product in the wet / humid place.



Please follow the direction in using the product as it may become the reason of malfunction, serious injury, or even death.

Caution

- Please contact us to take an action when product fails.
- Please power off during the removal of any matter.
- Please ventilate the air circulation in closed area.
- Please install the product away from the near interferences.
- Please install the wiring in a safe place.
- Please follow the directed terms of compliance in using the electrical product.

● Table of Contents


I . INTRODUCTION	6
HP-380 series printers are designed to be installed or connected to a kiosk system.....	6
1. Product Composition.....	6
2. Printer Main Part Name.....	7
II. MAIN FUNCTIONS.....	8
1. Paper feed button and status notification lamp	8
1) Paper feed button.....	8
III. INSTALLATION METHOD.....	10
1. Recommended size for panel installation.....	10
2. How to Install the Panel Printer I	10
IV. HOW TO USE A PRINTER.....	13
1. Interface connection	13
2. Paper Change.....	14
1) How to open the cover.....	14
2) How to fix the paper	15
4. HEX DUMP PRINT	18
V . PRINTER FUNCTION SETTING.....	19
1. Setting Manually	19
2. Firmware Update.....	21

VI. PRODUCT SPECIFICATIONS	22
1. Specification.....	22
2. Interface Specification	23
1) USB.....	23
2) Serial (RS-232C)	24
VII. EXTERNAL DIMENSION.....	25
VIII. COMMAND SPECIFICATIONS	26

I . Introduction

HP-380 series printers are designed to be installed or connected to a kiosk system.


1. Product Composition

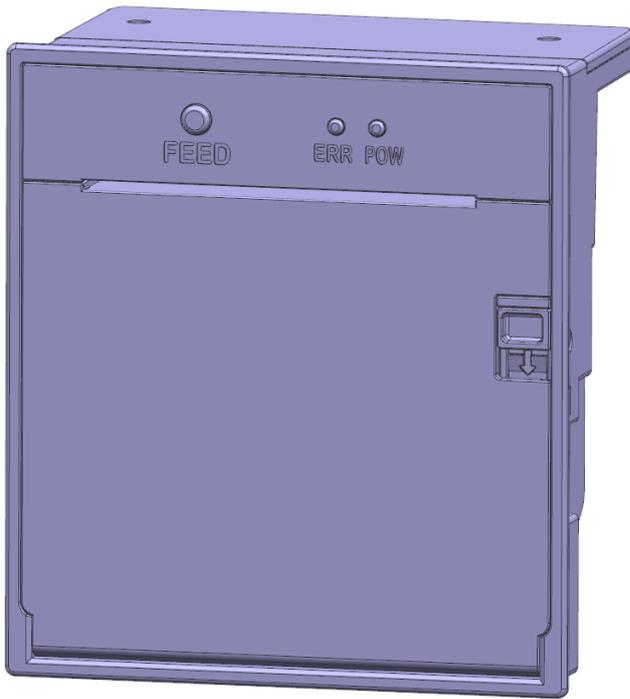


HP-380



Cover open key

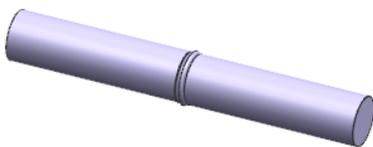

Paper shift


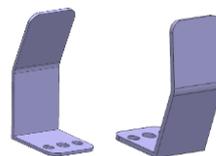


Mount bracket



Screw (M3x3.5)


2. Printer Main Part Name

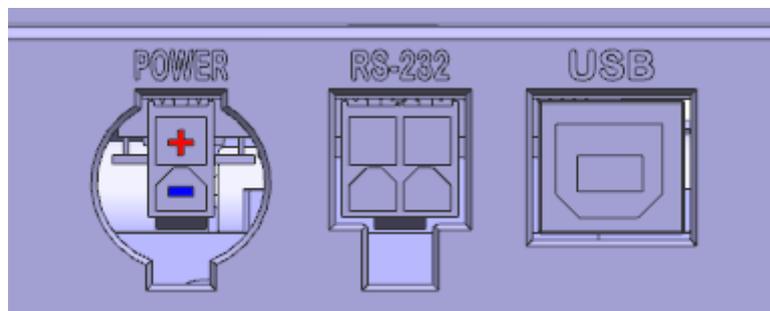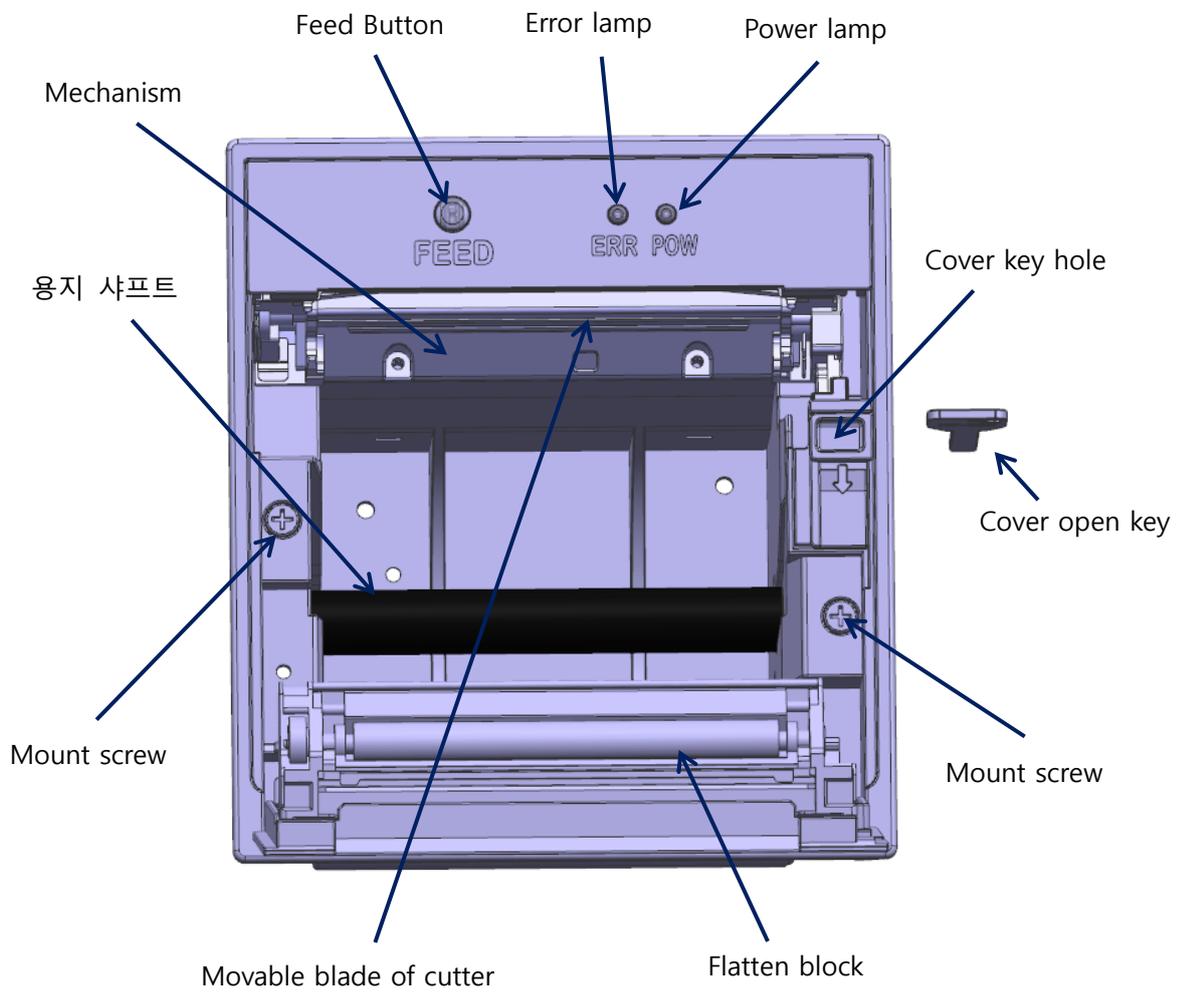

II. Main Functions

1. Paper feed button and status notification lamp


1) Paper feed button

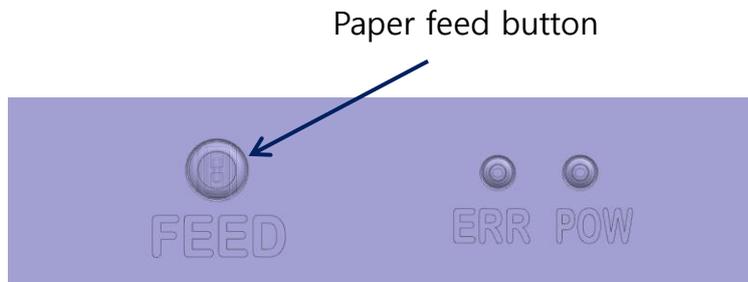

The FEED button can perform the following functions.

- ① **Paper transfer** : Pressing the transfer button with the paper inserted transfers the paper while it is being pressed.
- ② **Self-test** : The self-test result will be printed when the FEED button is pressed and the ERROR notification lamp is illuminated once and then released
- ③ **Checking and changing printer status** : The ERROR notification lamp flashes continuously when the transfer button is pressed and the power is turned on and pressed continuously, when the button is released, the printer status menu is printed.

2) Status notification lamp

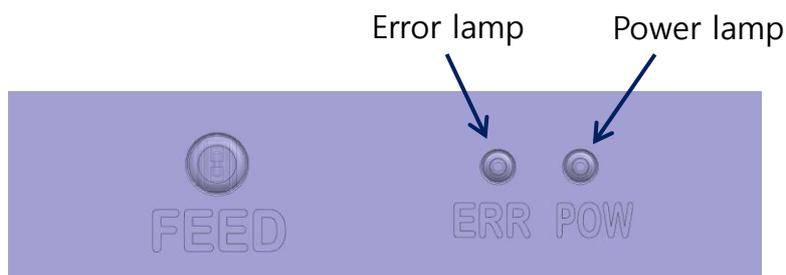


- ① **Power lamp** : When the power is on, the power (POW) notification indicator (green lamp) will illuminate.
- ② **Error notification lamp** : Depending on the status of the printer, the flashing speed of the notification lamp tells you the status of the printer as below.

Notification lamp status	Alarm sound	Status of printer
Flashing briefly	Beep(briefly)	No paper
Flashing for a long time	Beep(Long term)	Cover open, cutter jammed, paper jammed, etc

III. Installation Method


1. Recommended size for panel installation

- Width : 113.6mm, - Length : 127.6mm, - Panel thickness : T1.0 or T1.6

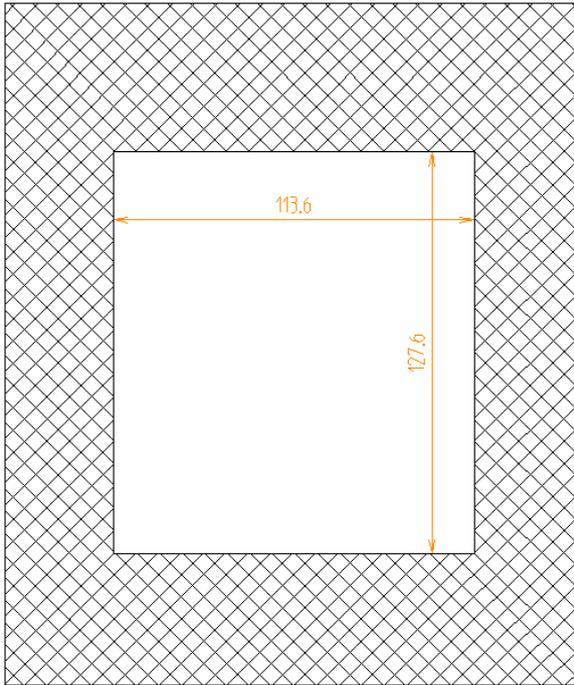


2. How to Install the Panel Printer I


1) Put the product in the square hole of the panel..

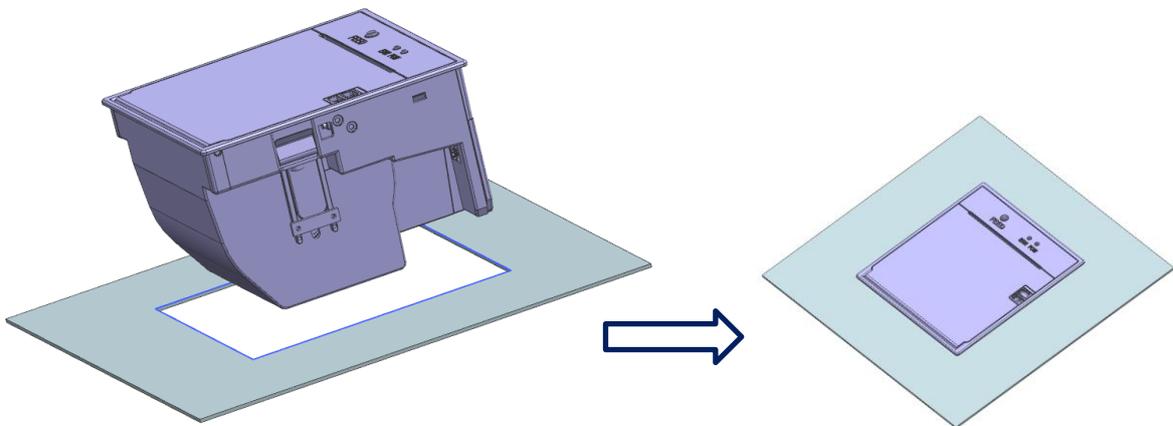

2) Open the printer cover.

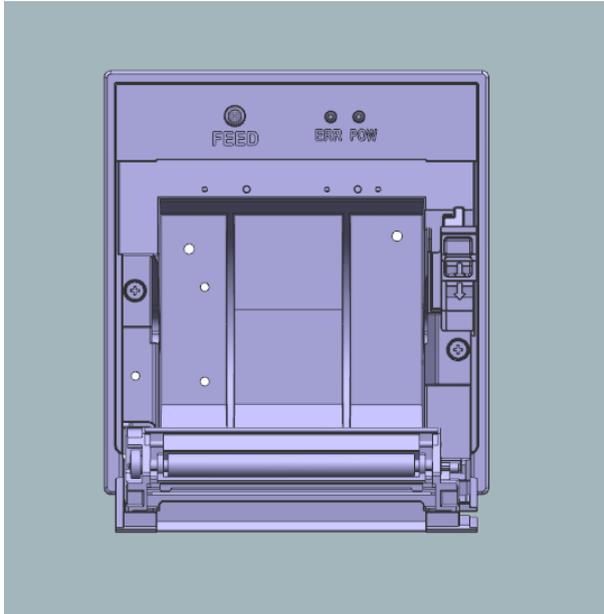

3) Tighten the two mounting screws for fixing the panel..

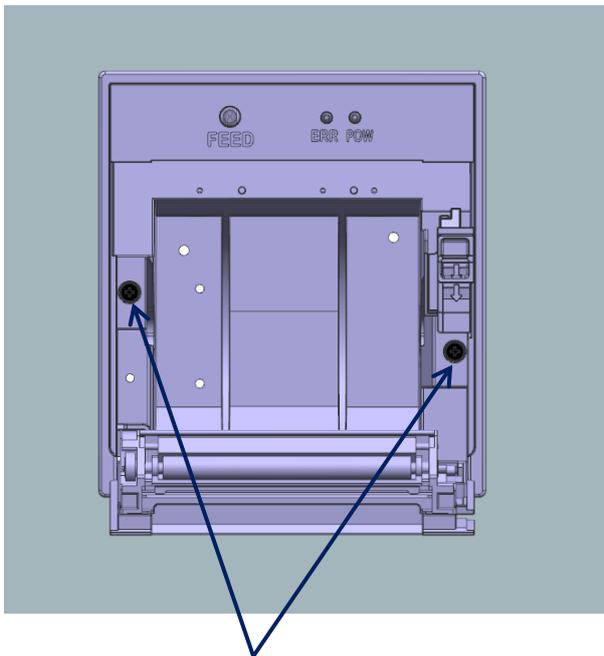


Mounting screws





CAUTION When fixing the mounting screw, be careful to fix it as excessive force may cause deformation of the product.

3. How to Install the Panel Printer II

1) Put the product in the square hole of the panel.

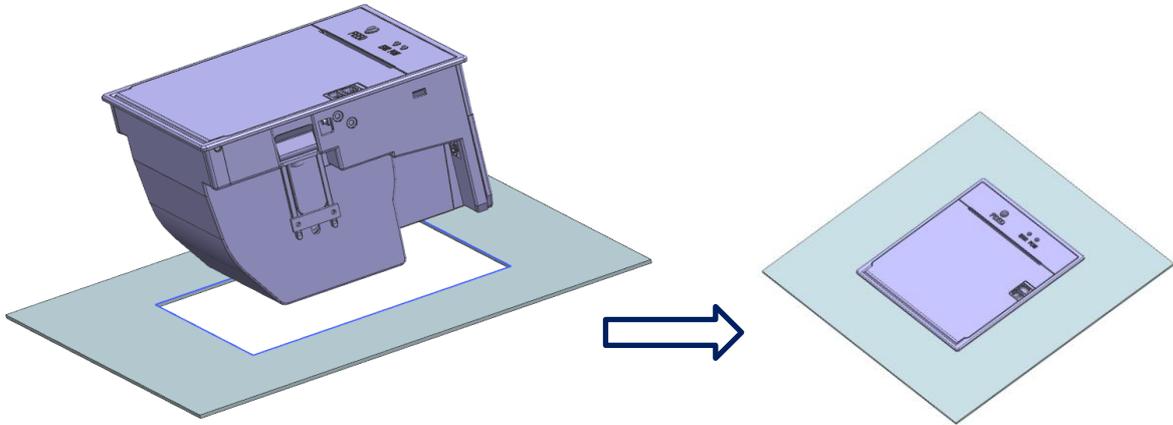


2) Fix up the fixing brackets on both sides using screws. (Fixing brackets, screws supplied separately)

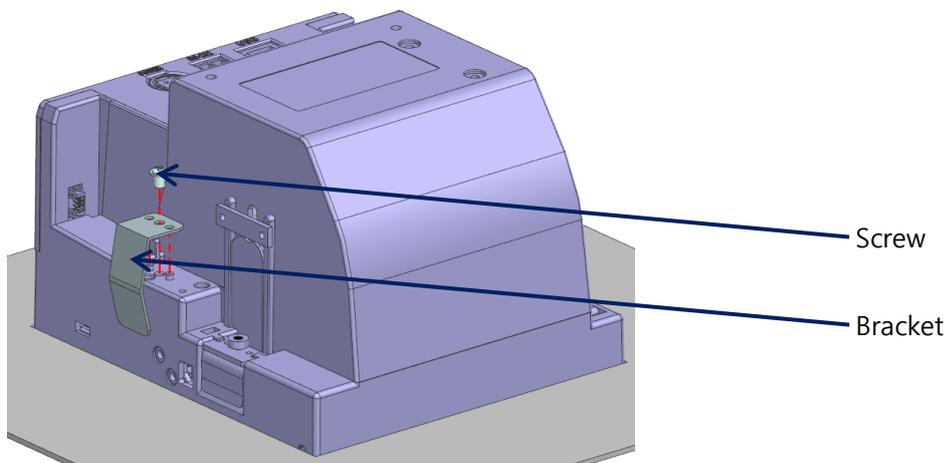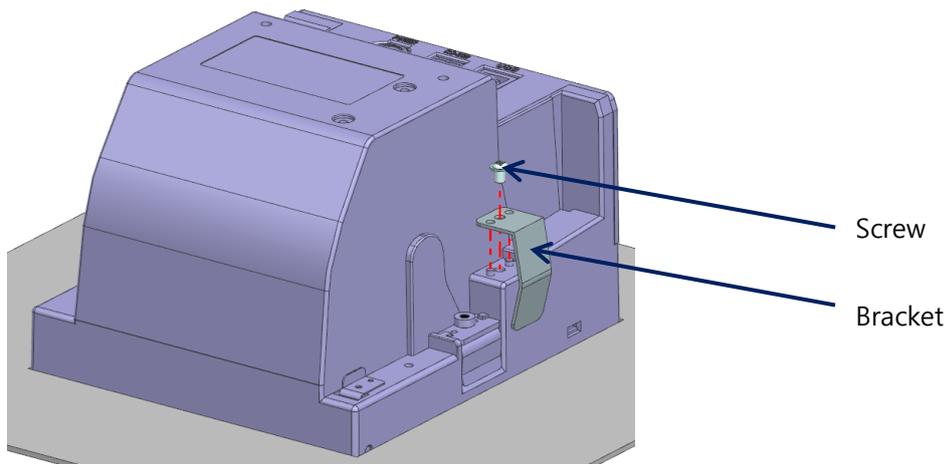

IV. How to use a printer

1. Interface connection

Use the interface cable that connects to the host that meets the specifications

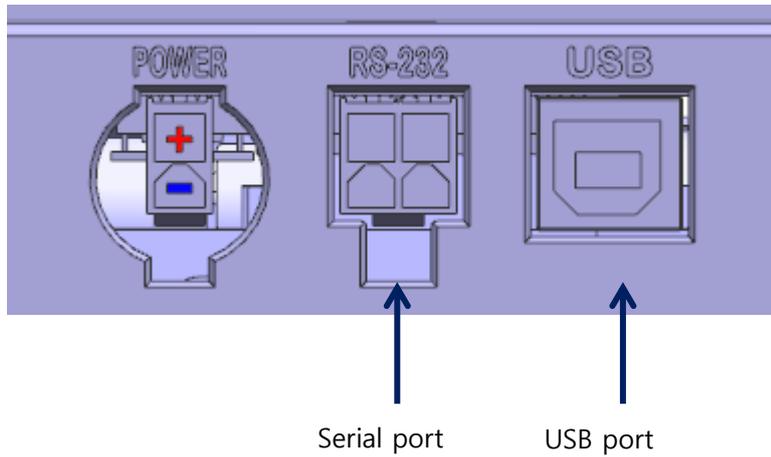


Make sure to turn off the power switch when connecting the communication cable.


2. Paper Change

1) How to open the cover

- ① Move the cover open lever in the direction of the arrow until it is caught.

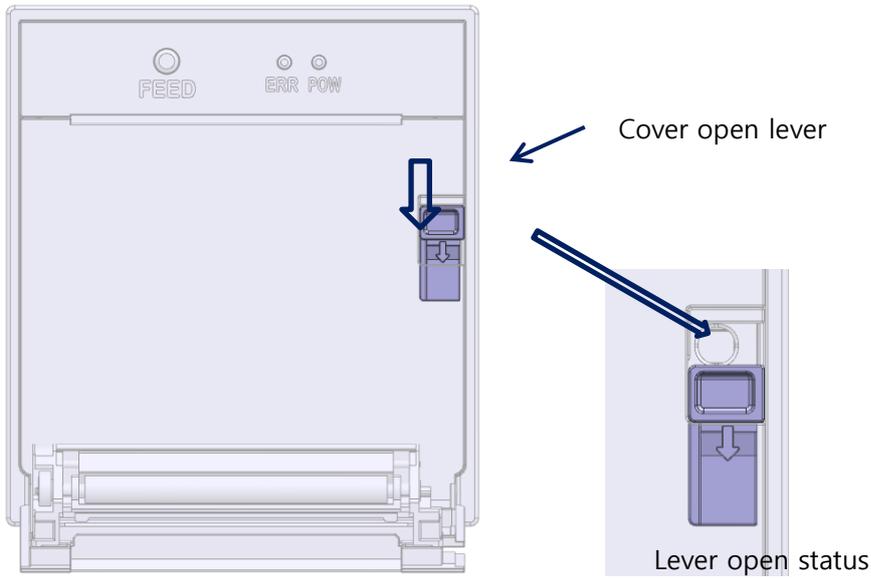


- ③ Insert the cover open key in the hole and press it in the direction of the arrow until the cover is opened.

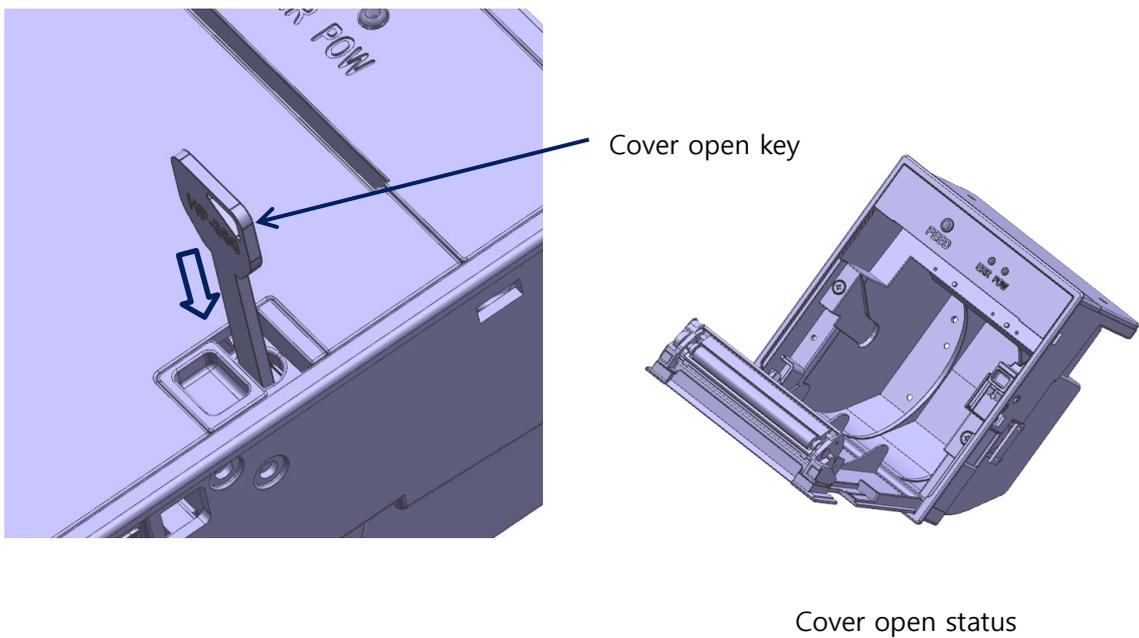


2) How to fix the paper


- ① Insert the paper shaft into the paper pipe and fit it into the product guide groove.

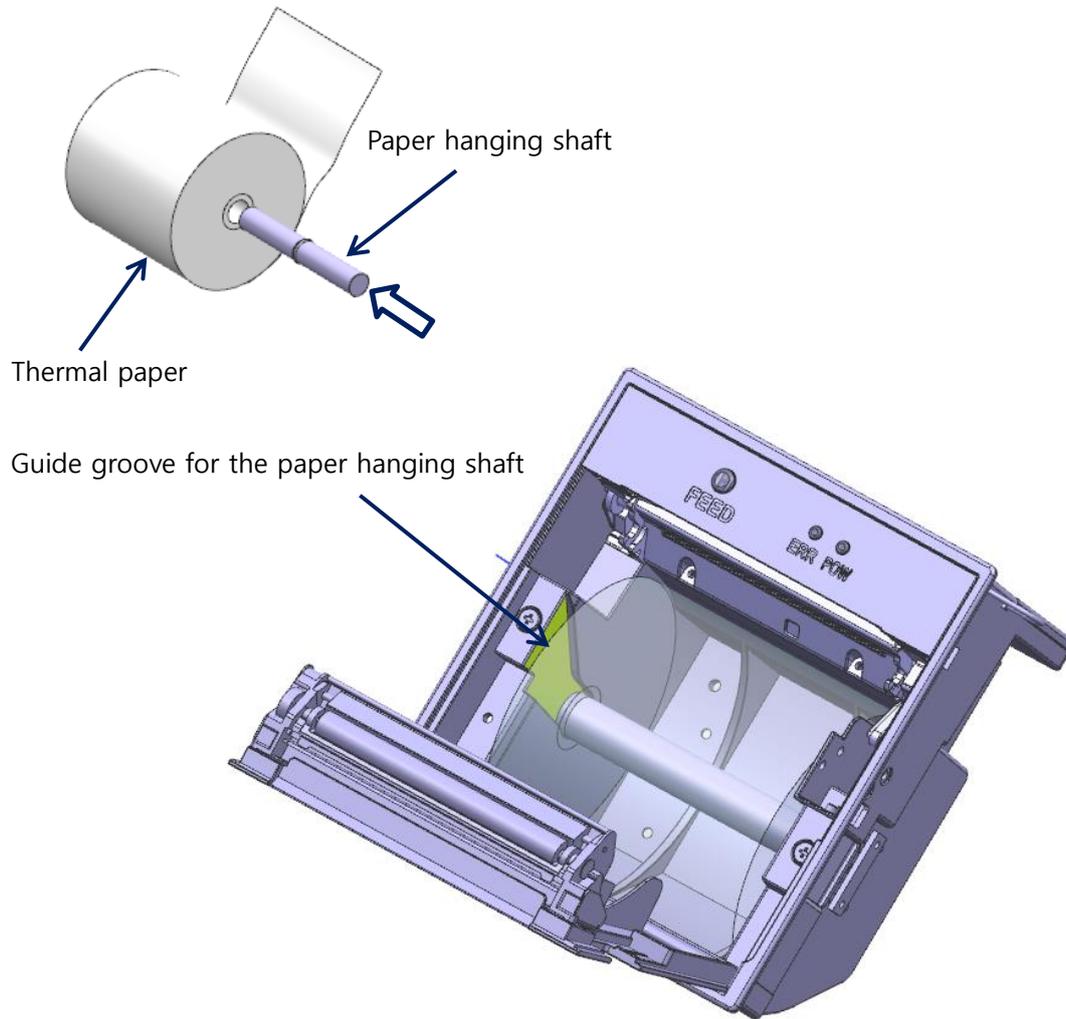


Be careful not to change the printing side of the paper.

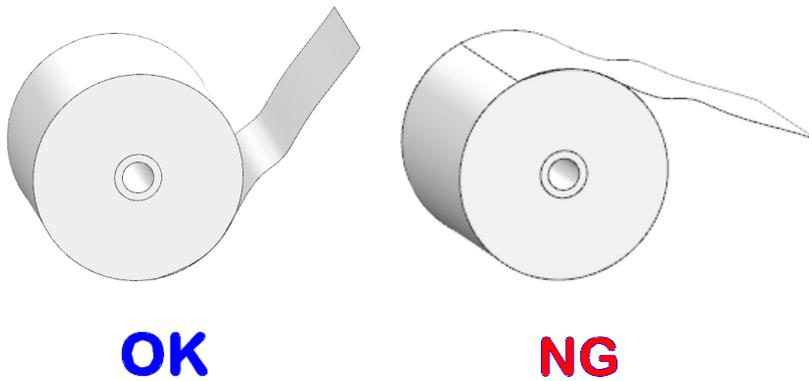

- ② Make sure the end of the paper is out of the printer and close the cover.

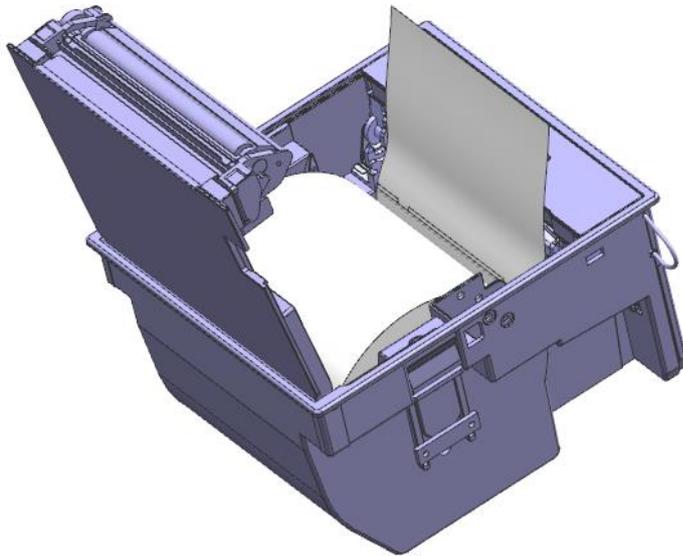

Press the center of the cover in the direction of the arrow to close it.

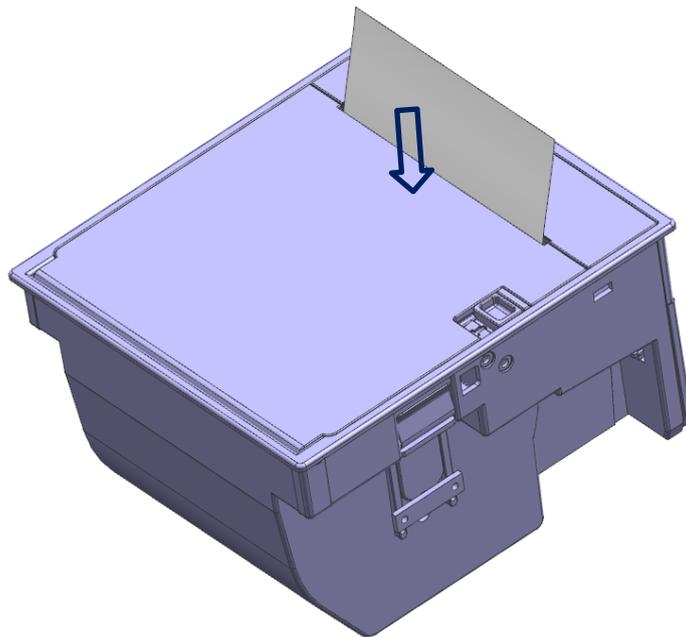

CAUTION

When closing the cover, press firmly on the middle part of the cover (near the arrow) to close it. Failure to do so may result in blurred printing.

3. Self-test print

Self-testing allows you to see the current settings on your printer.

- ① With the power off, press the feed button and power it on.
- ② Power on and hold the feed button (approximately 1 second) until the red notification light flashes, and when the feed button is released, printing starts.
- ④ The following contents will be printed.

```
*****  
HP-380 Control Board  
Firmware   : VerX .XX  
Create     : 20XX/XX/XX  
*****  
Interface and Setting information  
-----  
Interface  : USB & RS-232C  
Baud Rate  : 19200  
Data Bit   : 8 Bit  
Parity     : None  
Stop Bit   : 1 or 2  
-----  
Peripheral & Setting Information  
-----  
USB Status : Built-in  
Auto Cutter : Built-
```

- Model Name
- Firmware Version and Created Date
- Interface Configuration
- Sample Print

4. HEX DUMP PRINT

Turn on the power after placing the Dip SW1 number 8 to ON position. After printing as [HEX DUMP MODE], it will print all receiving datas to 16 hexadecimal data for all receiving datas. This would be useful when developing an application because this notifies the transmission status.

Prints if 12 digits is received.

Data under 12 digits will be printed when you press the feed button.

Control code (below $1F_{16}$) will be printed as ".".

Prints as "^" when 80_{16} or above.

[Print Sample]

16 hexadecimal indication	ASCII Indication
[HEX DUMP MODE]	
41 42 43 44 45 46 47 47 49	A B C D E F G H I
30 31 32 33 34 35 36 37 38	0 1 2 3 4 5 6 7 8
FF 1B 69	^ . i

V. Printer Function Setting

There are two ways to set the printer's functions such as serial communication conditions, Ethernet, black mark, etc., which are: a manual setting method in which the printer itself is changed, and a method using tools such as a memory switch program that connects to a PC. For the direct communication method through the Window Driver, refer to the separate manual attached with the setting program on our website.

1. Setting Manually

1) If the power is turned on while holding the FEED button for more than 2 seconds, the ERROR light turns off and then on and off repeatedly, and the items for which settings can be adjusted are printed as follows.

```
[Menu]
 1.Baud rate
 2.Parity
 3.Flow control
 4.Hex Dump Mode
 5.Print Density
 6.Auto Melody
 7.Cut Mode
 8.Auto Buzzer
 9.Print Speed
Select and then Enter...

Enter : Press the feed button once for
        more than 1second.
Select: Press the feed button many times
        less than 1second as menu number .
Exit  : Turn power off then on.
```

2) Item change and specification are determined by the length of time that the FEED button is pressed. Pressing the FEED button for less than 1 second will change to the next item. For example, if you want to adjust the print density, press the FEED button 5 times shortly to change the item to "5. Print Density".

After that, if you press and hold the FEED button for more than 1 second, the item is specified

and the current setting value is output.

```
[Print Density]
-> 1. Normal
    2. Medium
    3. Dark
    4. Most Dark

-> : Indicate current set status
Select and then Enter...
```

"->" indicates the currently set value.

3) In the same way, press for less than 1 second to toggle to the item you want to change and then set the item.

For example, if you want to change the current setting value from "1. Normal" to "4. Most Dark", simply press the FEED button 4 times and then press and hold 1 time..

- It was changed successfully!

This indicates that the change was successful.

- The value is invalid, try again!

This is displayed when the selected item is invalid or when you move to another menu without changing the item.

4) If the change is made successfully, the changeable items printed first are displayed.

If you need to make further adjustments, you can proceed in the same way.

Turn the power off and on after making all the changes.

2. Firmware Update

With the adoption of flash memory, you can easily update the printer program from a PC.

When updating, be sure to read the steps below.

1) Turn the power off and then back on.

2) Make sure that the communication cable is connected with the printer.

(You can shorten the update time by using a USB cable.)

3) Run the provided update program, set the model name and communication port, and perform the update.

The ERROR LIGHT turns off, and after a few seconds, it flashes rapidly and the update starts.

Never turn off the printer power before the update is completed.

4) When the update complete mark appears, the update is completed.

※ If there is an update error during update, the ERROR LIGHT blinks slowly. After closing the update program, check the model and communication cable for abnormalities. After checking that the values are correct, run the update program again and repeat step 1).

5) After the update is completed, it is automatically reset and becomes available to use.

※ For more information on updating firmware, please check our website or contact the person in charge.

VI. Product Specifications

1. Specification

Item		Specification
Printing method		Thermal dot line printing
Resolution (dot size)		203DPI
Dots per line		576 dots
Paper feed width (1 step)		0.125mm
Paper thickness		50 μ m ~ 80 μ m
Paper width		80mm
Paper outer diameter size		Φ 80
Printing width		72mm
Number of characters per line	Font A(12x24)	51
	Font B(9x16)	68
	Korean A(24x24)	25
	Korean B(16x16)	38
Printing speed		Max 200mm/s
Font size	Font A(12x24)	1.50 x 3.00mm
	Font B(9x16)	1.13 x 2.00mm
	Korean A(24x24)	3.00 x 3.00mm
	Korean B(16x16)	2.00 x 2.00mm
Number of characters		English 95
		Extended characters (Code page) : 128 x 10
Barcode	1 Dimension	UPC-E, EAN8, EAN13, ITF, CODABAR, CODE39, CODE93, CODE128
	2 Dimension	PDF417, QR CODE
Cutter		Guillotine method (complete cutting, partial cutting possible)
Interface	Serial	RS232C
	USB	USB2.0 Full Speed
Receiving Buffer		4Kbyte
SMPS rating	Input voltage	24V(DC)
	Output current	2.5A 60W
Life (25°C, standard condition)		Head 100Km(100 million pulse) Cutter : 1,000,000 times (for print duty 12%, it may vary slightly depending on the paper used.)
Temperature range		Operating temperature -20°C ~ 60°C(#1) Storage temperature -25°C - 60°C
Humidity range		Operating humidity 40 - 85% RH (non-condensing) Storage humidity 40 - 95% RH

(#1) Guaranteed operating temperature range of the product is only from 0°C to 45°C, the

guaranteed life time of product may be reduced if used outside the guaranteed temperature range.


2. Interface Specification

1) USB


- Standard : USB 2.0 Compatible, Full Speed(12Mb) response
- Connector : Type B
- Cable : USB2.0 Standard Cable
- Data Method : Bulk IN, Bulk OUT
 - * Bulk IN : End point 6
 - * Bulk OUT : End point 2
 - * Full Speed : Max Packet Size 64 Byte(Bulk OUT),64 Byte(Bulk IN)

2) Serial (RS-232C)

- Data Transfer Method : Serial
- Handshake : Hardware (RTS/CTS or DTR/DSR)
- Baud Rate : 9600, 19200, 38400, 57600, 115203., BPS
- Data Bit : 8 bit
- Parity : None, Odd, Even
- Stop Bit : 1, 2 bit
- Connector: Hanlim CHD1140-4
- Cable : DSUB9(Female) - 4pin Custom Cable

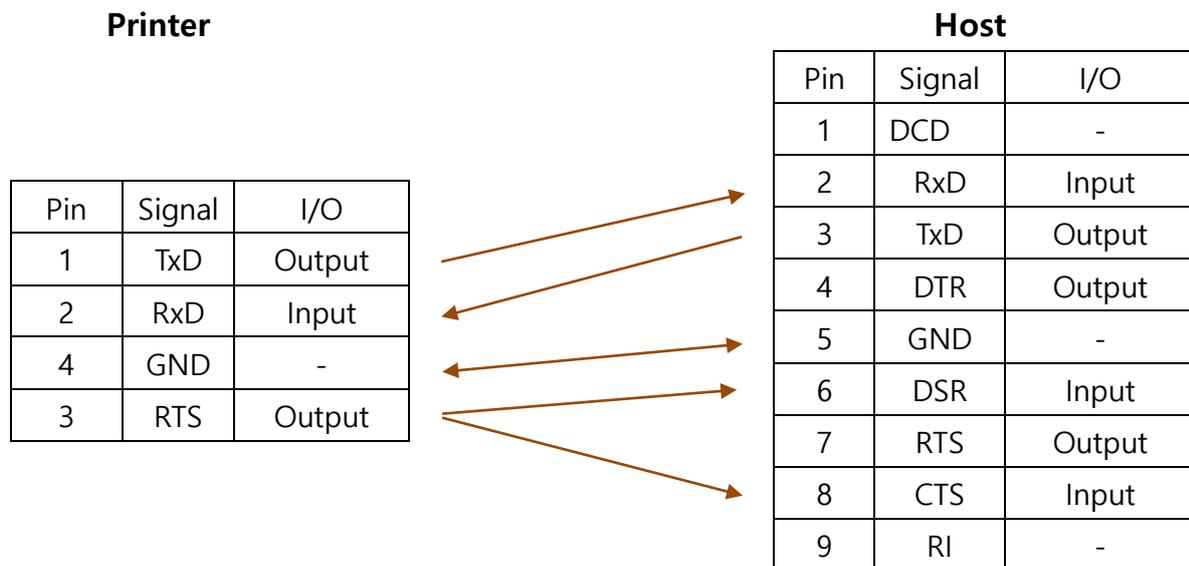

VII. External Dimension

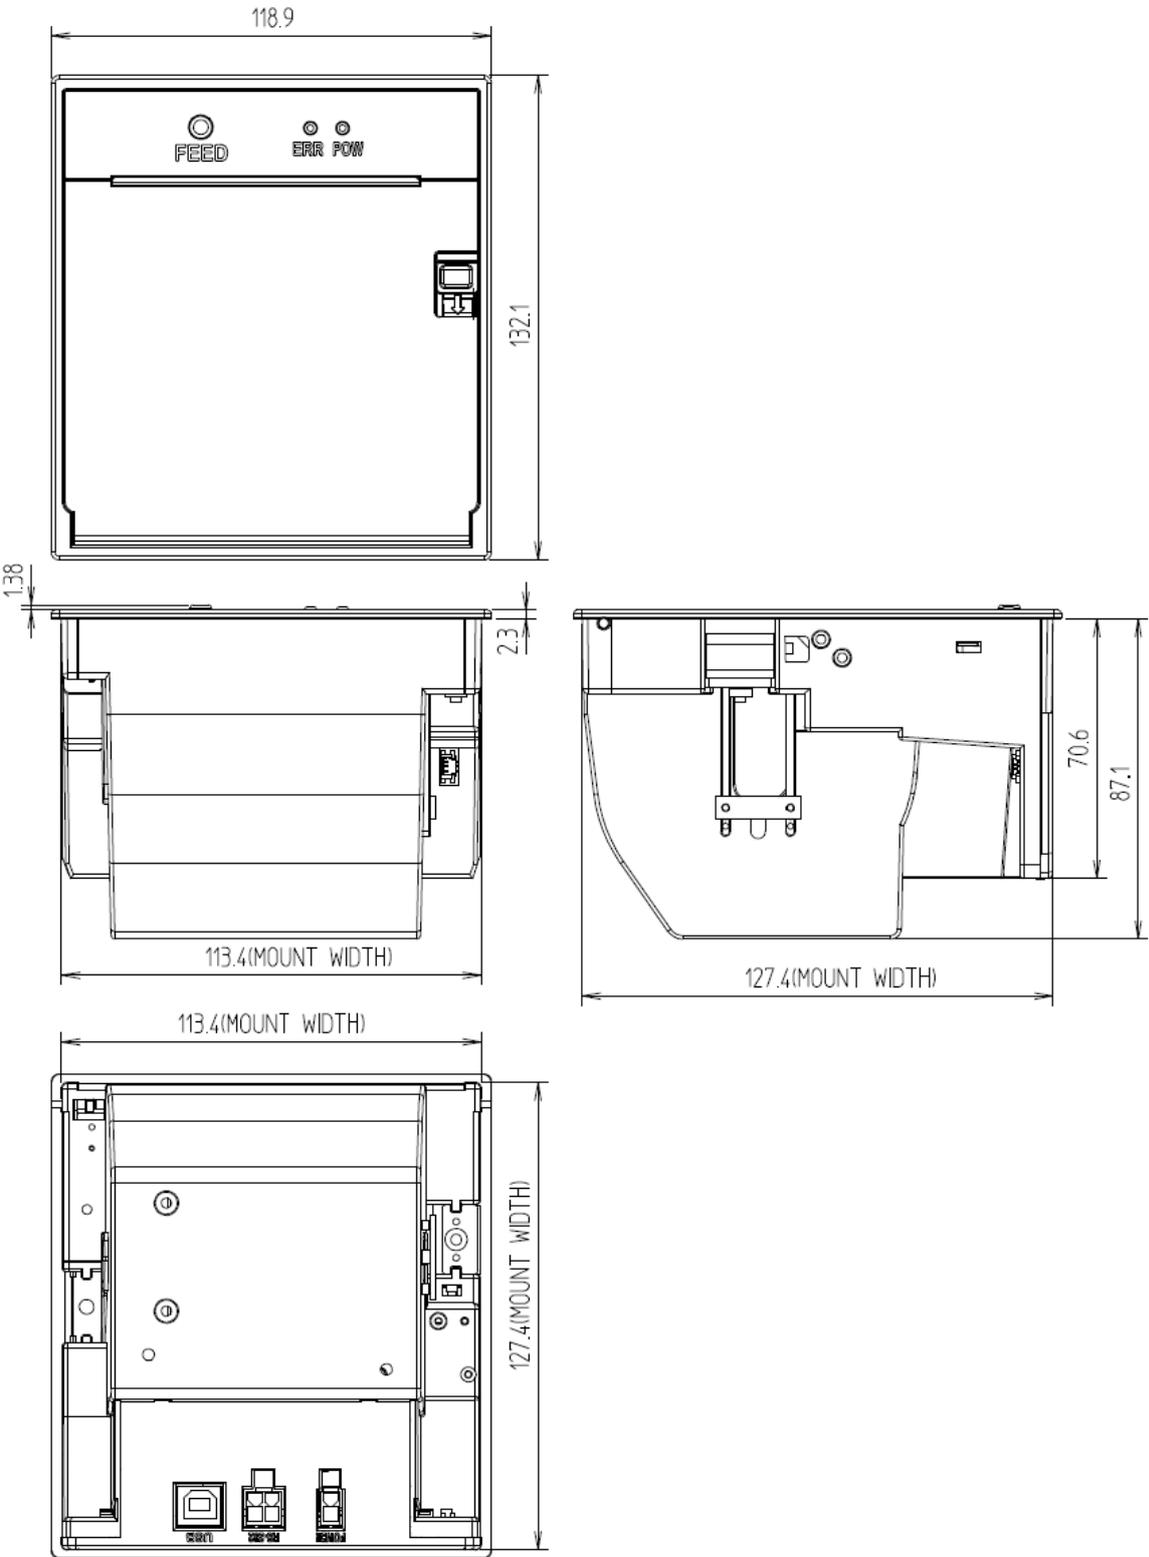

VIII. Command Specifications

Classification	Function	Page
CR	Print and line feed	28
LF	Print and line feed	28
CAN	Delete print data	28
HT	Horizontal tab	28
SUB x	Extended Graphic Mode, Korean mode	29
SUB R	Border of characters Border of characters	29
SUB s	Set print speed	30
ESC D	Set horizontal tab position	31
ESC SP	Set the amount of space to the right of ASCII characters	31
ESC !	Collective setting of ASCII character decorations	32
ESC \$	Set the absolute position of print	33
ESC *	Set bit image (vertical arrangement)	34
ESC -	Set and Cancel ASCII character underscore	36
ESC 2	Initial row spacing	36
ESC 3	Set row spacing	37
ESC @	Printer reset	37
ESC E	Bold format	37
ESC G	Double printing	38
ESC J	FEED	38
ESC j	BACK FEED	38
ESC M	Font selection	39
ESC R	Set international characters	40
ESC a	Printing position Alignment	41
ESC d	Print and row unit FEED	41
ESC {	180° rotation	42
ESC i	Paper Cut (Full Cut)	42
ESC m	Paper Cut (Partial Cut)	42
FS !	Collective setting of Korean character printing mode	43

FS &	Set Korean character mode in extended graphic mode	44
FS.	Cancel Korean character mode in extended graphic mode	44
FS -	Set Korean Character underline	45
FS S	Set Korean Character blank spacing	45
FS W	Set Korean Character size	46
FS q	NV logo (bit image) registration	47
FS p	NV logo printing	48
GS !	Set character enlargement magnification	49
GS (K (fn=49)	Print density	50
GS B	Black/White reverse printing	50
GS H	Set position of barcode HRI character printing	51
GS L	Set left margin	51
GS V	Paper cutting	52
GS W	Set print area	52
GS h	Barcode height	53
GS k	Barcode printing	54
GS w	Set horizontal size of the barcode	55
GS r	Status check response	56
GS a	Turn on and off automatic response to status check	56
DLE ENQ	Real-time buffer clear	58
DLE EOT	Real-time printer status transmission	58
GS v	Raster bit image (horizontal)	60
SUB B	2D barcode	61
SUB 1	Select rule line 1	62
SUB 2	Select rule line 2	62
SUB W	WRITE rule line data	63
SUB C	CLEAR rule line data	63
SUB O	Rule line ON	63
SUB F	Rule line OFF	64
SUB P	Print rule line 1 dotted line	64
ESC t	Set international code page	65

CR

Function	Print and line feed	
Code	ASCII	CR
	Hex	0Dh
	Decimal	13
Description	Same as LF	

LF

Function	Print and line feed	
Code	ASCII	LF
	Hex	0Ah
	Decimal	10
Description	① STANDARD MODE: Prints data and line feeds as the line space setting. ② PAGE MODE: Line feeds as the line space setting.	
Caution	LF immediately after CR is ignored.	

CAN

Function	Delete print data	
Code	ASCII	CAN
	Hex	18h
	Decimal	24
Description	Delete print data in print area.	

HT

Function	Horizontal tab	
Code	ASCII	HT
	Hex	09h
	Decimal	9
Description	Move print position to next tab.	
Caution	Tab position is set to ESC+'D'+n.	

SUB+'x'+n

Function	Extended Graphic Mode, Korean mode			
Code	ASCII	SUB	x	n
	Hex	1A	78h	n
	Decimal	26	120	n
Range	0≤n≤1			
Initial value	n=0			
Description	n=0: Korean mode - When the first code is A1h or higher, 2 bytes are processed and converted into Korean automatically. n=1: Extended Graphic Mode - All codes are processed as 1-byte codes. Extended Graphic characters can be printed.			

SUB+'R'+n

Function	Set the border(outline) of characters			
Code	ASCII	SUB	b	n
	Hex	1A	52h	n
	Decimal	26	82	n
Range	0≤n≤1			
Description	n=0: Remove border (rectangle) of characters. n=1 Enables border (rectangle) of characters.			
Caution	When enlarged horizontally, it is effective up to the size of 8 times; however, when enlarged vertically, it is effective only up to the size of 2 times.			

SUB+'s'+n

Function	Set print speed			
Code	ASCII	SUB	s	n
	Hex	1A	73h	n
	Decimal26	82	n	
Range	1≤n≤14			

Initial value n=14

Description n=1: Prints at a speed of 70mm/s.
n=2: Prints at a speed of 80mm/s.
n=3: Prints at a speed of 90mm/s.
n=4: Prints at a speed of 100mm/s.
n=5: Prints at a speed of 110mm/s.
n=6: Prints at a speed of 120mm/s.
n=7: Prints at a speed of 130mm/s.
n=8: Prints at a speed of 140mm/s.
n=9: Prints at a speed of 150mm/s.
n=10: Prints at a speed of 160mm/s.
n=11: Prints at a speed of 170mm/s.
n=12: Prints at a speed of 180mm/s.
n=13: Prints at a speed of 190mm/s.
n=14: Prints at a speed of 200mm/s.

ESC+'D'+n1...nk+NUL

Function Horizontal tab position setting

Code	ASCII	ESC	D	n1...nk	NUL
	Hex	1B	44h	n1...nk	00
	Decimal	27	68	n1...nk	0

Range $1 \leq n \leq 255, 0 \leq k \leq 32$

Description Set the horizontal tab position.

Caution n denotes the number of digits from the start of the line to the set position.

k is the total number of tabs in a row.

ESC+SP+n

Function Set the amount of space to the right of ASCII characters.

Code	ASCII	ESC	SP	n
	Hex	1B	20h	n
	Decimal	27	32	n

Range $0 \leq n \leq 255$

Initial n=0

value

Description Set the space to the right of ASCII characters to nx 0.125mm.

Caution Spacing for Korean is set using FS+'S'+n.

ESC+'!'+n

Function	Collective setting of ASCII character decorations			
Code	ASCII	ESC	!	n
	Hex	1B	21h	n
	Decimal	27	33	n
Range	0≤n≤255			
Initial value	n=0			
Description	Sets the font and character decoration all at once			
Caution	For Korean, only font and highlight are applied.			

Bit	Function	Hex	Decimal
0	0: Font 12x24, Select 24x24	00h	0
	1: Font 8x16, Select 16x16	01h	1
1	-	-	-
2	-	-	-
3	0: Highlight off	00h	0
	1: Highlight on	08h	8
4	0: Vertical enlargement off	00h	0
	1: Vertical enlargement on	10h	16
5	0: Horizontal enlargement off	00h	0
	1: Horizontal enlargement on	20h	32
	-	-	-
7	0: Underline off	00h	0
	1: Underline on	80h	128

ESC+'\$'+nL+nH

Function	Setting of absolute position				
Code	ASCII	ESC	\$	nL	nH
	Hex	1B	24h	nL	nH
	Decimal	27	36	nL	nH
Range	$0 \leq nL + nH \times 256 \leq 65535$, $0 \leq nL \leq 255$, $0 \leq nH \leq 255$				
Initial value	nL=0, nH=0				
Description	The print position is moved from the end of the left margin to the $(nL + nH \times 256) \times 0.125\text{mm}$ position. When the print area is exceeded, it moves to the end point of the left margin.				

ESC+'*' + m + nL + nH + d1 + ... + dk

Function Setting of bit image

Code	ASCII	ESC	*	m	nL	nH	d1...dk
	Hex	1B	2Ah	m	nL	nH	d1...dk
	Decimal	27	42	m	nL	nH	d1...dk

Range m = 0, 1, 32, 33

$1 \leq nL + nH \times 256 \leq 1023, 0 \leq nL \leq 255, 0 \leq nH \leq 3, 0 \leq d \leq 255$




Initial

value


Description Bit data is printed as graphic data in mode m by the number of dots designated by $nL + nH \times 256$.

m	mode	Number of dots in vertical direction	Number of dots in horizontal direction	Number of data (k)
0	8 dots single density	8	224	$nL + nH \times 256$
1	8 dots double density	8	448	$nL + nH \times 256$
32	24 dots single density	24	224	$(nL + nH \times 256) \times 3$
33	24 dots double density	24	448	$(nL + nH \times 256) \times 3$

8-dot mode

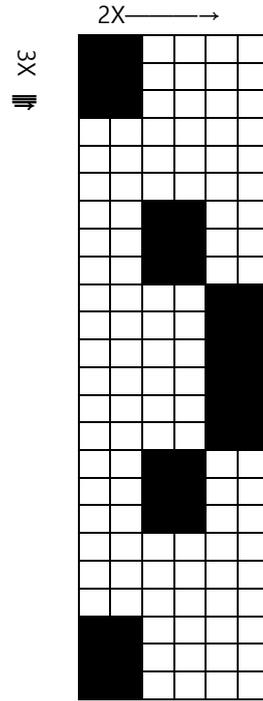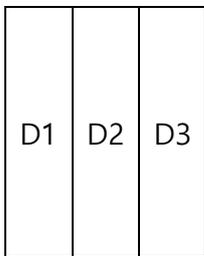
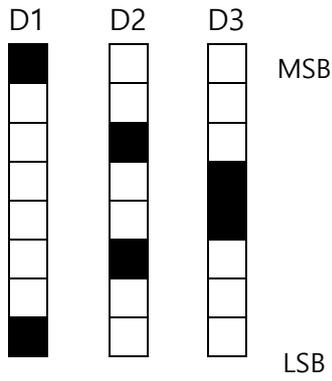


Single density

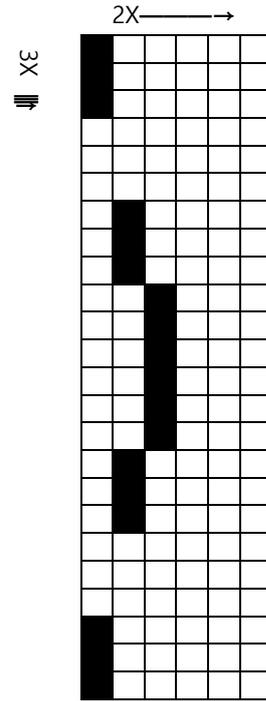


Double density

24-dot mode

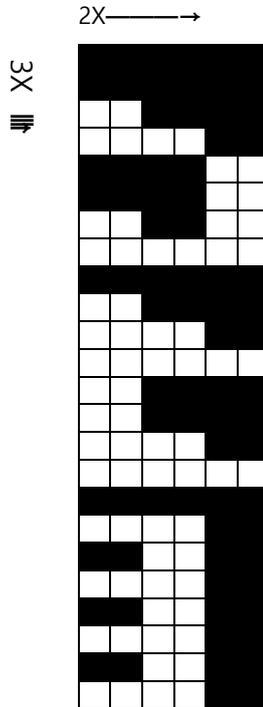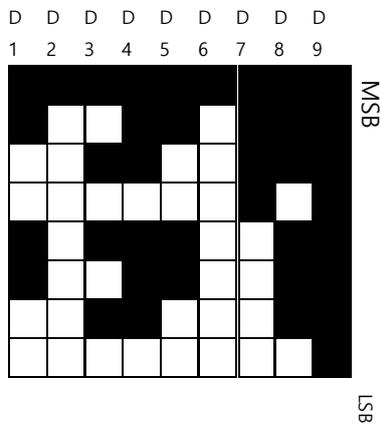

Single density

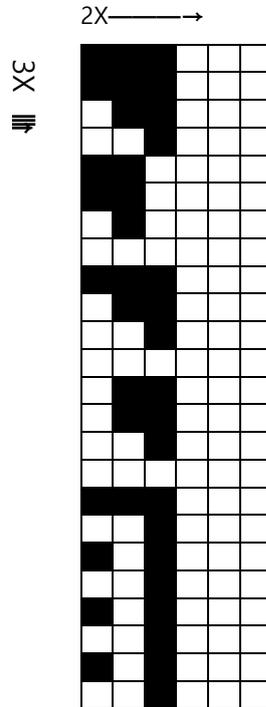

Double density

ESC+'-' +n

Function Set / Cancel underline

Code	ASCII	ESC	-	n
	Hex	1B	2Dh	n
	Decimal	27	45	n

Range $0 \leq n \leq 255$

Initial value $n=0$

Description Set / Cancel underline.
on

n	Function
0	Underline off
1	Set underline thickness to 0.125mm
2	Set underline thickness to 0.25mm
3	Set underline thickness to 0.375mm
4	Set underline thickness to 0.5mm
5	Set underline thickness to 0.625mm
6	Set underline thickness to 0.75mm
7	Set underline thickness to 0.875mm

ESC+'2'

Function Set initial line spacing

Code	ASCII	ESC	2
	Hex	1B	32h
	Decimal	27	50

Range $0 \leq n \leq 255,$

Initial value $n=0$

Description Set the row spacing to the initial value 4mm.

ESC+'3'+n

Function	Set row spacing			
Code	ASCII	ESC	3	n
	Hex	1B	33h	n
	Decimal	27	51	n
Range	0≤n≤255,			
Initial value	n=0			
Description	Set row spacing to nx 0.125mm.			

ESC+'@'

Function	Printer reset		
Code	ASCII	ESC	@
	Hex	1B	40h
	Decimal	27	64
Range	0≤n≤255		
Description	Clear buffer and initialize all parameters.		

ESC+'E'+n

Function	Set bold font			
Code	ASCII	ESC	E	n
	Hex	1B	45h	n
	Decimal	27	69	n
Range	0≤n≤255			
Initial value	n=0			
Description	Bold format is turned off when n=0. Bold format is turned on when n=1.			

ESC+'G'+n

Function Set double print(double strike) font

Code	ASCII	ESC	G	n
	Hex	1B	47h	n
	Decimal	27	71	n

Range $0 \leq n \leq 255$

Initial value $n=0$

Description $n=0$: Cancel Double print font
 $n=1$: Set Double print font.

ESC+'J'+n

Function Feeding

Code	ASCII	ESC	J	n
	Hex	1B	4Ah	n
	Decimal	27	74	n

Range $0 \leq n \leq 255$

Description After printing the data in the buffer, it is fed by $n \times 0.125\text{mm}$.

ESC+'j'+n

Function Back Feeding

Code	ASCII	ESC	j	n
	Hex	1B	6Ah	n
	Decimal	27	106	n

Range $0 \leq n \leq 255$

Description After printing the data in the buffer, it is back-fed by $n \times 0.125\text{mm}$.

ESC+'M'+n

Function Font selection

Code	ASCII	ESC	M	n
	Hex	1B	4Dh	n
	Decimal	27	77	n

Range $0 \leq n \leq 255$

Initial value $n=0$

value

Description Set the printer font.

n			
Upper 4 bits (2-byte font)		Lower 4 bits (ASCII, 1-byte font)	
0000	Korean 24x24 Gothic	0000	12x24
0001	Korean 16x16 Dotum font	0001	8x16 (9x16)
0010	Japanese 24x24 Ming font	0010	Reservation
0011	Chinese 24x24 Gothic	0011	Reservation



CAUTION

If you set the memory switch using the memory switch setting utility, you can select and use one of the above fonts as the default font without this command. For details, refer to the memory switch setting items.

ESC+'R'+n

Function Setting of international characters

Code	ASCII	ESC	R	n
	Hex	1B	52h	n
	Decimal	27	82	n

Range $0 \leq n \leq 13$

Initial value $n=13$

value

Description International characters are set as shown in the table below.

n	Country name
0	United States
1	France
2	Germany
3	United Kingdom
4	Denmark 1
5	Sweden
6	Italy
7	Spain 1
8	Japan
9	Norway
10	Denmark 2
11	Spain 2
12	Latin America
13	Korea

ESC+'a'+n

Function Set printing position alignment
Code ASCII ESC a n
Hex 1B 61h n
Decimal 27 97 n
Range $0 \leq n \leq 2$
Initial value $n=0$

Description Align the printing position

n	Alignment position
0	Left
1	Center
2	Right

ESC+'d'+n

Function Print and n row feed
Code ASCII ESC d n
Hex 1B 64h n
Decimal 27 100 n
Range $0 \leq n \leq 255$
Description Feeds by n line(s) after printing data.

ESC+'{'+n

Function 180° rotation

Code ASCII ESC { n
Hex 1B 7Bh n
Decimal27 123 n

Range $0 \leq n \leq 255$

Initial value n=0

Description Prints by rotating 180°.

Caution The reference point moves from the left end to the right end.

n	Function
0	Turn off 180° rotation
1	Turn on 180° rotation

ESC+'i'

Function Full Cutting

Code ASCII ESC i
Hex 1B 69h
Decimal27 105

Description The paper is fully cut.

ESC+'m'

Function Partial Cutting

Code ASCII ESC m
Hex 1B 6Dh
Decimal27 109

Description The paper is partially cut.

Caution In the case of the presenter model, partial cutting is set to invalid and full cutting is performed.

FS+'!'+n

Function Collective setting of Korean character printing mode

Code ASCII FS ! n

Hex 1C 21h n

Decimal28 33 n

Range $0 \leq n \leq 255$

Initial $n=0$

value

Description Set Korean printing mode character decoration collectively

Caution Applies only to Korean.

Bit	Function	Hex	Decimal
0	-	00h	0
1	-	00h	0
2	Horizontal enlargement off	00h	0
	Horizontal enlargement on	04h	4
3	Vertical enlargement off	00h	0
	Vertical enlargement on	08h	8
4	-	00h	0
5	-	00h	0
6	-	00h	0
7	Underline off	00h	0
	Underline on	80h	128

FS+'&'

Function Korean character mode (2-byte mode) setting

Code	ASCII	FS	&
	Hex	1C	26h
	Decimal28	38	

Description Sets Korean mode (2-byte mode).

Caution Necessary when printing Korean characters in extended graphic mode. It is automatically recognized during Korean mode, so no setting is required. (Refer to SUB+'x'+n command.)

FS+'.'

Function Cancel Korean character mode (2-byte mode)

Code	ASCII	FS	.
	Hex	1C	2Eh
	Decimal28	46	

Description Korean mode (2-byte mode) is deactivated.

Caution Necessary when deactivating 2-byte mode during extended graphic mode. It is automatically recognized during Korean mode, so no setting is required. (Refer to SUB+'x'+n command.)

FS+'-' +n

Function Set Korean Character underline

Code ASCII FS - n
 Hex 1C 2Dh n
 Decimal28 45 n

Range $0 \leq n \leq 2$

Initial value $n=0$

Description Sets underlining of Korean characters.

n	Function
0	Deactivates underlining of Korean characters.
1	The thickness of Korean underline is set to 0.125mm.
2	The thickness of Korean underline is set to 0.25mm.

FS+'S'+n1+n2

Function Set spacing between Korean characters

Code ASCII FS S n1 n2
 Hex 1C 53h n1 n2
 Decimal28 83 n1 n2

Range $0 \leq n1 \leq 255, 0 \leq n2 \leq 255$

Initial value $n=0$

Description Sets spacing between Korean characters.
 The left space between Korean characters is set to $n1 \times 0.125\text{mm}$.
 The right space between Korean characters is set to $n2 \times 0.125\text{mm}$.

FS+'W'+n

Function Set Korean Character size

Code	ASCII	FS	W	n
	Hex	1C	57h	n
	Decimal28	87	n	

Range $0 \leq n \leq 255$

Initial value $n=0$

Description Korean character size is set to be double horizontally and vertically.
When $n=0$, 2X horizontal and 2X vertical are disabled.
When $n=1$, 2X horizontal and 2X vertical are set.

FS+'q'+n+(xL+xH+yL+yH+d1...dk)1.....+(xL+xH+yL+yH+d1...dk)n

Function Registration of NV (non-volatile) logo (bit image)
 Code ASCII FS q n (xL xH yL yH d1..dk)1...(xL xH yL yH d1..dk)n
 Hex 1C 71h n (xL xH yL yH d1..dk)1...(xL xH yL yH d1..dk)n
 Decimal 28 113 n (xL xH yL yH d1..dk)1...(xL xH yL yH d1..dk)n
 Range $1 \leq n \leq 255$
 $0 \leq xL + xH \times 256 \leq 65535$ ($0 \leq xL \leq 255, 0 \leq xH \leq 255$)
 $0 \leq yL + yH \times 256 \leq 65535$ ($0 \leq yL \leq 255, 0 \leq yH \leq 255$)
 $0 \leq d \leq 255$

$$k = (xL + xH \times 256) \times (yL + yH \times 256) \times 8$$

The registerable capacity is up to 64KB.

Description Registers the designated NV (non-volatile) logo (bit image) in non-volatile memory.

n means the total number of NV logos.

xL,xH sets the number of dots in the horizontal direction of $(xL + xH \times 256) \times 8$.

yL,yH sets the number of dots in the vertical direction of $(xL + xH \times 256) \times 8$.


k means the number of bit images of one NV logo.



CAUTION

As long as the NV logo does not exceed the capacity, several types can be registered, but when re-registering, care must be taken to ensure that all of them are erased and then re-registered.

<Registered image>

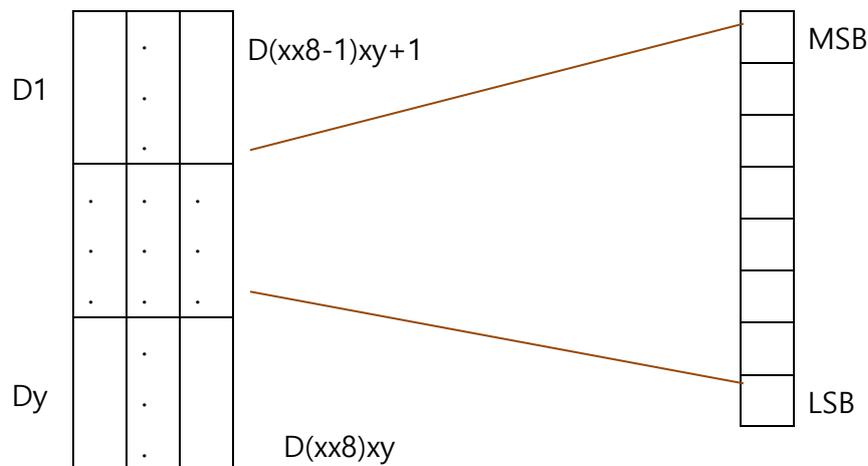

FS+'p'+n+m

Function NV logo print

Code	ASCII	FS	p	n	m
	Hex	1C	70h	n	m
	Decimal28	112	n	m	

Range $1 \leq n \leq 255, 0 \leq m \leq 3$

Initial value $n=0$

value

Description The registered NV logo is printed in m mode.
n refers to the nth registered logo.

m	Printing mode
0	STANDARD
1	Horizontal enlargement
2	Vertical enlargement
3	Horizontal and vertical enlargement

GS+'!'+n

Function Set the character enlargement ratio

Code ASCII GS ! n

Hex 1D 21h n

Decimal 29 33 n

Range $0 \leq n \leq 255$ (However, the maximum value of horizontal and vertical enlargement is limited to 8.)

Initial value $n=0$

Description Sets the character enlargement ratio.



When enlarging horizontally and vertically at the same time, add both numbers below.

CAUTION

Example) 3 times horizontally, 3 times vertically: $n=32+2=34$

Bit	Function
0-3	Sets the vertical enlargement ratio.
4-7	Sets the horizontal enlargement ratio.

Horizontal enlargement

n(Hex)	n(Decimal)	Enlargement ratio
00h	0	1X
10h	16	2X
20h	32	3X
30h	48	4X
40h	64	5X
50h	80	6X
60h	96	7X
70h	112	8X

Vertical enlargement

n(Hex)	n(Decimal)	Enlargement ratio
00h	0	1X
01h	1	2X
02h	2	3X
03h	3	4X
04h	4	5X
05h	5	6X
06h	6	7X
07h	7	8X

GS+'('+'K'+pL+pH+fn+m (fn=49)

Function	Set the print density							
Code	ASCII	GS	(K	pL	pH	fn	m
	Hex	1D	28h	4Bh	pL	pH	fn	m
	Decimal29		40	75	pL	pH	fn	m
Range	pL=2, pH=0, fn=49							
	0≤m≤5, 251≤m≤255							
Initial value	m=0							
Description	Sets the print density.							

m	Print density	m	Print density
-	-	0	Standard Density
251	Density level -5	1	Density level +1
252	Density level -4	2	Density level +2
253	Density level -3	3	Density level +3
254	Density level -2	4	Density level +4
255	Density level -1	5	Density level +5



CAUTION

If a Density other than the standard Density is specified, the life of the head is shortened.

It is recommended to print below the standard density.

GS+'B'+n

Function	Printing Black & White in reverse			
Code	ASCII	GS	B	n
	Hex	1D	42h	n
	Decimal29	66	n	
Range	0≤n≤255			
Initial value	n=0			
Description	Select the Printing black and white in reverse.			
	When n=0, standard printing			
	When n=1, black and white reverse printing			

GS+'H'+n

Function Designates barcode HRI character print position.

Code	ASCII	GS	H	n
	Hex	1D	48h	n
	Decimal	29	72	n

Range $0 \leq n \leq 3$

Initial value $n=0$

Description Sets the printing position of barcode numbers and characters.

n	Printing position
0	No printing
1	Prints on top of the barcode.
2	Prints at the bottom of the barcode.
3	Prints on top and at the bottom of the barcode.

GS+'L'+nL+nH

Function Sets the left margin.

Code	ASCII	GS	L	nL	nH
	Hex	1D	4Ch	nL	nH
	Decimal	29	76	nL	nH

Range $0 \leq nL \leq 255, 0 \leq nH \leq 255$

Initial value $nL+nH \times 256=0$ ($nL=0, nH=0$)

Description Sets the left margin to $(nL+nH \times 256) \times 0.125\text{mm}$.

GS+'V'+m

Function Paper cutting

Code ASCII GS V m
 Hex 1D 56h m
 Decimal29 86 m

Range $0 \leq m \leq 1$

Initial m=0

value

Description Paper is cut using the specified options.

m	Function
0	Full Cutting
1	Partial Cutting

GS+'W'+nL+nH

Function Designates the printing area.

Code ASCII GS W nL nH
 Hex 1D 57h nL nH
 Decimal29 87 nL nH


Range $0 \leq nL \leq 255, 0 \leq nH \leq 255$

Initial $nL+nH \times 256 = 448$ (56mm, nL=0, nH=0)

value

Description Sets the printing area to $(nL+nH \times 256) \times 0.125\text{mm}$ in the left margin.

n

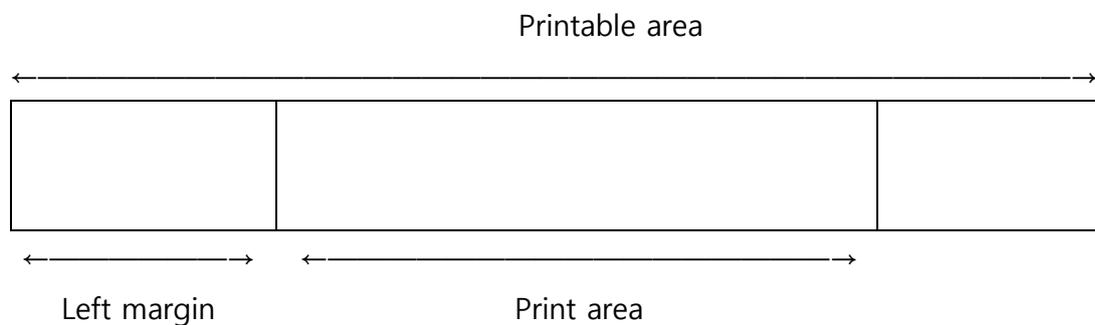

GS+'h'+n

Function	Sets the barcode height.			
Code	ASCII	GS	h	n
	Hex	1D	68h	n
	Decimal29	104	n	
Range	$1 \leq n \leq 255$			
Initial value	n=162 (20.25mm)			
Description	The barcode height is set to $n \times 0.125\text{mm}$.			

GS+'k'+m+d1...dn+NUL

Function Barcode printing

Code ASCII GS k m d1...dn NUL
 Hex 1D 6Bh m d1...dn 00h
 Decimal29 107 m d1...dn 0

Range $1 \leq m \leq 7$, n and d differ depending on the barcode (see table below).

Description Prints barcode

m	Barcode type	n (number of barcode data)	d (barcode data)
1	UPC-E	n=7 (verification characters added automatically)	$48 \leq d \leq 57$
2	EAN13	n=12 (verification characters added automatically)	$48 \leq d \leq 57$
3	EAN8	n=7 (verification character added automatically)	$48 \leq d \leq 57$
4	CODE39	$1 \leq n$ (start and stop characters added automatically)	$48 \leq d \leq 57$, $65 \leq d \leq 90$ d=32,36,37,43,45,46,47
5	ITF (I of 2/5)	$1 \leq n$ (odd, even numbers)	$48 \leq d \leq 57$
6	CODABAR	$1 \leq n$	$48 \leq d \leq 57$, $65 \leq d \leq 68$ d=36,43,45,46,47,58
7	CODE128	$2 \leq n \leq 255$ (verification and stop characters added automatically)	$0 \leq d \leq 127$

Caution In CODE128, in the case of special characters as shown in the table below, add "{" to set to 2 bytes.

Special characters	Barcode data		
	ASCII	Hex	Decimal
SHIFT	{S	7Bh, 53h	123, 83
CODE A	{A	7Bh, 41h	123, 65
CODE B	{B	7Bh, 42h	123, 66
CODE C	{C	7Bh, 43h	123, 67
FNC1	{1	7Bh, 31h	123, 49

FNC2	{2	7Bh, 32h	123, 50
FNC3	{3	7Bh, 33h	123, 51
FNC4	{4	7Bh, 34h	123, 52
"{"	{{	7Bh, 7Bh	123, 123

In addition, the starting character of CODE A, CODE B, or CODE C must be added at the beginning to distinguish the CODE 128 type.

CODE128 classification	Starting character	Example of printing barcode data "ABCD"
CODE A	g	"gABCD"
CODE B	h	"hABCD"
CODE C	i	"iABCD"

GS+'w'+n

Function	Sets the horizontal size of the barcode.			
Code	ASCII	GS	w	n
	Hex	1D	77h	n
	Decimal29	119	n	
Range	1 ≤ n ≤ 4			
Initial value	n=2			
Description	Sets the horizontal size of the barcode.			

n	Multi-level barcode Module width	2-level barcode	
		Narrow element	Wide element
1	0.25mm	0.125mm	0.375mm
2	0.375mm	0.25mm	0.625mm
3	0.5mm	0.375mm	1mm
4	0.625mm	0.5mm	1.25mm

* Multi-level barcode: UPC-E, EAN13, EAN8

* 2-level barcode: CODE39, ITF, CODABAR

GS+'r'+n

Function Status check response

Code ASCII GS r n
Hex 1D 72h n
Decimal29 114 n

Range n=1

Description Transmits the current status of the printer.



CAUTION

Since this command cannot be received while the printer is offline, the status cannot be checked. Therefore, it is desirable to use real-time status check (DLE+EOT+n).

GS+'a'+n

Function Enabling and disabling status check automatic response

Code ASCII GS a n
Hex 1D 61h n
Decimal29 97 n

Range $0 \leq n \leq 1$

Initial n=1

value

Description Set or cancel the status check automatic response function.

This printer has a function enabling it to automatically respond when the status changes after checking the printer status. This command can be used to enable or disable this function.

n	Function
0	Status check automatic response function disabled
1	Status check automatic response function enabled

<Status transmission data>

Bit	State	Hex	Decimal
0	0: There is paper.	00h	0
	1: No paper.	01h	1
1	0: Printer head down	00h	0
	1: Printer head up	02h	2
2	0: Paper not jammed.	00h	0
	1: Paper jammed.	04h	4
3	0: Paper remained enough.	00h	0
	1: Not much paper left.	08h	8
4※	0: Print completed	00h	0
	1: During printing or feeding	10h	16
5	0: No cutter error(jam).	00h	0
	1: There is a cutter error(jam).	20h	32
6	0 (Not used)	00h	0
7	0: No paper in the auxiliary sensor.	00h	0
	1: There is paper in the auxiliary sensor.	80h	128

※ The status value of bit 4 is valid only when real-time command DLE + EOT + n command is executed, otherwise it is fixed to 0.

DLE+ENQ+n

Function Clearing each buffer in the printer in real time

Code	ASCII	DLE	ENQ	n
	Hex	10h	05h	n
	Decimal16	5	n	

Range n=2

Description n=2: Each buffer of the printer is cleared in real time.



CAUTION

If data that matches this command is received, care must be taken as the same operation as this command is performed (bit image data, etc.).

DLE+EOT+n

Function Send the printer status values in real time.

Code	ASCII	DLE	EOT	n
	Hex	10h	04h	n
	Decimal16	4	n	

Range n=2

Description As soon as this command is received, 1 byte of the printer status value is transmitted in real time.



CAUTION

If data that matches this command is received, care must be taken as the same operation as this command is performed (bit image data, etc.).

<Status transmission data>

Bit	State	Hex	Decimal
0	0: There is paper.	00h	0
	1: No paper.	01h	1
1	0: Printer head down	00h	0
	1: Printer head up	02h	2
2	0: Paper not jammed.	00h	0
	1: Paper jammed.	04h	4
3	0: Paper remained enough.	00h	0
	1: Not much paper left.	08h	8
4	0: Print completed.	00h	0
	1: Printing or feeding in progress.	10h	16
5	0: No cutter error(jam).	00h	0
	1: Cutter error(jam).	20h	32
6	0 (Not used)	00h	0
7	0: No paper in the auxiliary sensor.	00h	0
	1: There is paper in the auxiliary sensor.	80h	128

GS+'v'+ '0'+m+xL+xH+yL+yH+d1+...+dk

Function Raster bit image (horizontal)

Code ASCII GS v 0 m xL xH yL yH d1..dk
 Hex 1D 76h 30h m xL xH yL yH d1..dk
 Decimal 28 118 48 m xL xH yL yH d1..dk

Range $0 \leq m \leq 3$ or $48 \leq m \leq 51$,
 $1 \leq (xL+xH \times 256) \leq 150$ ($0 \leq xL \leq 150$, $xH=0$)
 $1 \leq (yL+yH \times 256) \leq 436$ ($0 \leq yL \leq 255$, $0 \leq yH \leq 1$)
 $0 \leq d \leq 255$ ($yL+yH \times 256$)
 k (total number of data) = $(xL+xH \times 256) \times (yL+yH \times 256)$

Descripti Prints raster bit image in mode m.

on xL,xH sets the number of data in the horizontal direction (bytes) of the image data.


yL,yH sets the number of dotted lines in the vertical direction of the image data.

d indicates raster bit image data.

m	Mode	Enlargement
0, 48	Normal	1X
1, 49	Horizontal enlargement	2X horizontal
2, 50	Vertical enlargement	2X vertical
3, 51	Horizontal, vertical enlargement	2X horizontal, 2X vertical

Example) Unfolded image

When $xL+xH \times 256 = 32$ bytes,

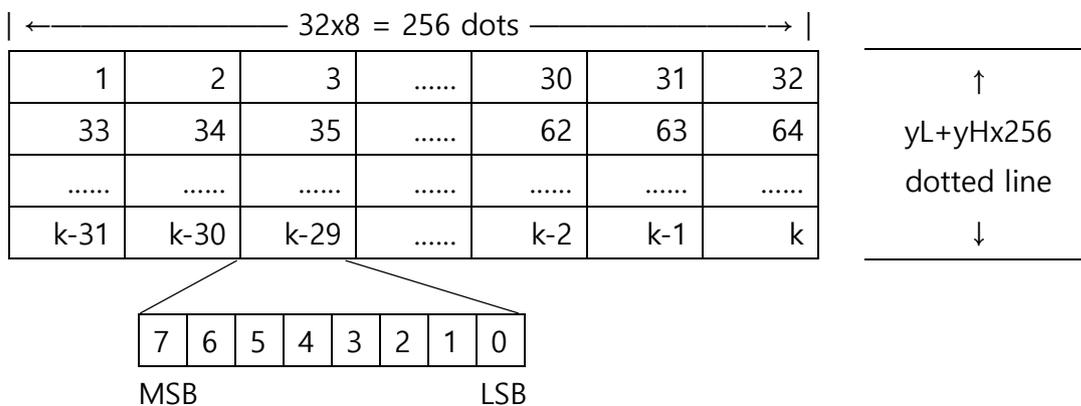

SUB+'B'+n1+n2+n3+d1.....dk

Function 2D barcode

Code	ASCII	SUB	B	n1	n2	n3	d1.....dk
	Hex	1A	42h	n1	n2	n3	d1.....dk
	Decimal	26	66	n1	n2	n3	d1.....dk

Range

n1	2D barcode type
1	PDF417
2	QR code

1) PDF417

n2	Number of barcode data
	$1 < n2 \leq 255$

n3	Barcode size
3	3 rows
4	4 rows
5	5 rows
6	6 rows
7	7 rows
8	8 rows
9	9 rows

2) QR code

n2	Number of barcode data
n3=1	$1 < n2 \leq 17$
n3=3	$1 < n2 \leq 53$
n3=5	$1 < n2 \leq 106$
n3=9	$1 < n2 \leq 230$

n3	Barcode size
1	Version 1
3	Version 3
5	Version 5
9	Version 9

※ Vertical size is set automatically.

Description Select and use the appropriate barcode size according to the number of barcode data.

n1: 2D barcode type

n2: number of barcode data

n3: barcode size

d1... dk: barcode data

SUB+'1'

Function Select rule line 1

Code	ASCII	SUB	1
	Hex	1A	31h
	Decimal26	49	

Description Rule line 1 is selected among rule lines 1 and 2.

SUB+'2'

Function Select rule line 2

Code	ASCII	SUB	1 => 2
	Hex	1A	32h
	Decimal26	50	

Description Rule line 2 is selected among rule lines 1 and 2.

SUB+'W'+nL+nH+kL+kH

Function	WRITE rule line data						
Code	ASCII	SUB	W	nL	nH	kL	kH
	Hex	1A	57h	nL	nH	kL	kH
	Decimal26	87	nL	nH	kL	kH	
Range	0≤nL+nH×256≤640、(0≤nL≤255, 0≤nH≤3) 0≤kL+kH×256≤640、(0≤kL≤255, 0≤kH≤3)						

Description Writes 1 from nL+nH×256 to kL+kH×256 on the selected rule line.



CAUTION

It is ignored if the defined range is exceeded.

Once written, the data is preserved without being erased until the clear rule lines command is received or the power is turned off.

SUB+'C'

Function	Clears rule line data.		
Code	ASCII	SUB	C
	Hex	1A	43h
	Decimal26	67	

Description All selected rule lines are cleared to 0.



CAUTION

To speed up processing, rule line print ON/OFF is used for printing/non-printing of rule lines written once, and this level=>Command is used to re-write rule line data.

SUB+'O'

Function	Rule line ON		
Code	ASCII	SUB	O
	Hex	1A	4Fh
	Decimal26	79	

Description Rule lines are set to Valid(ON). When it is enabled, it is written once and the selected rule lines are printed along with the character.

SUB+'F'

Function	Rule line OFF		
Code	ASCII	SUB	F
	Hex	1A	46h
	Decimal26	70	
Description	Rule lines are set to OFF, and rule line data is preserved.		

SUB+'P'

Function	Print rule line 1 dotted line		
Code	ASCII	SUB	P
	Hex	1A	50h
	Decimal26	80	
Description	Rule line 1 dotted line is printed.		



CAUTION

When printing character and graphic, do not use this command, but use the rule lines ON command. This command should be used to print rule lines in the space between row and row.

ESC+'t'+n

Function International code page setting

Code ASCII ESC t n
 Hex 1B 74h n
 Decimal 27 116 n

Range $0 \leq n \leq 8$

Initial value n=0

Description International characters of each code page are set as shown in the table below.



CAUTION

Valid when set to 1-byte mode with SUB + x command or FS + "" command.

Invalid when set to 2-byte mode.

n	Code Page
0	PC437 (US)
1	KANA (JAPAN)
2	Greece
3	Windows1251
4	PC866 (Cyrillic #2)
5	Windows1250 (Poland)
6	PC850 (Multilingual)
7	PC860 (Portugal),
8	Windows1252
9	Iran System Encoding Standard
10	PC857 (Turkish)